


Eternity™ 1

PREMIUM RUBBER UNDERLAYMENT

Advanced Underlayment for LVT/LVP, WPC/SPC, Laminate, Engineered Wood and Hardwood

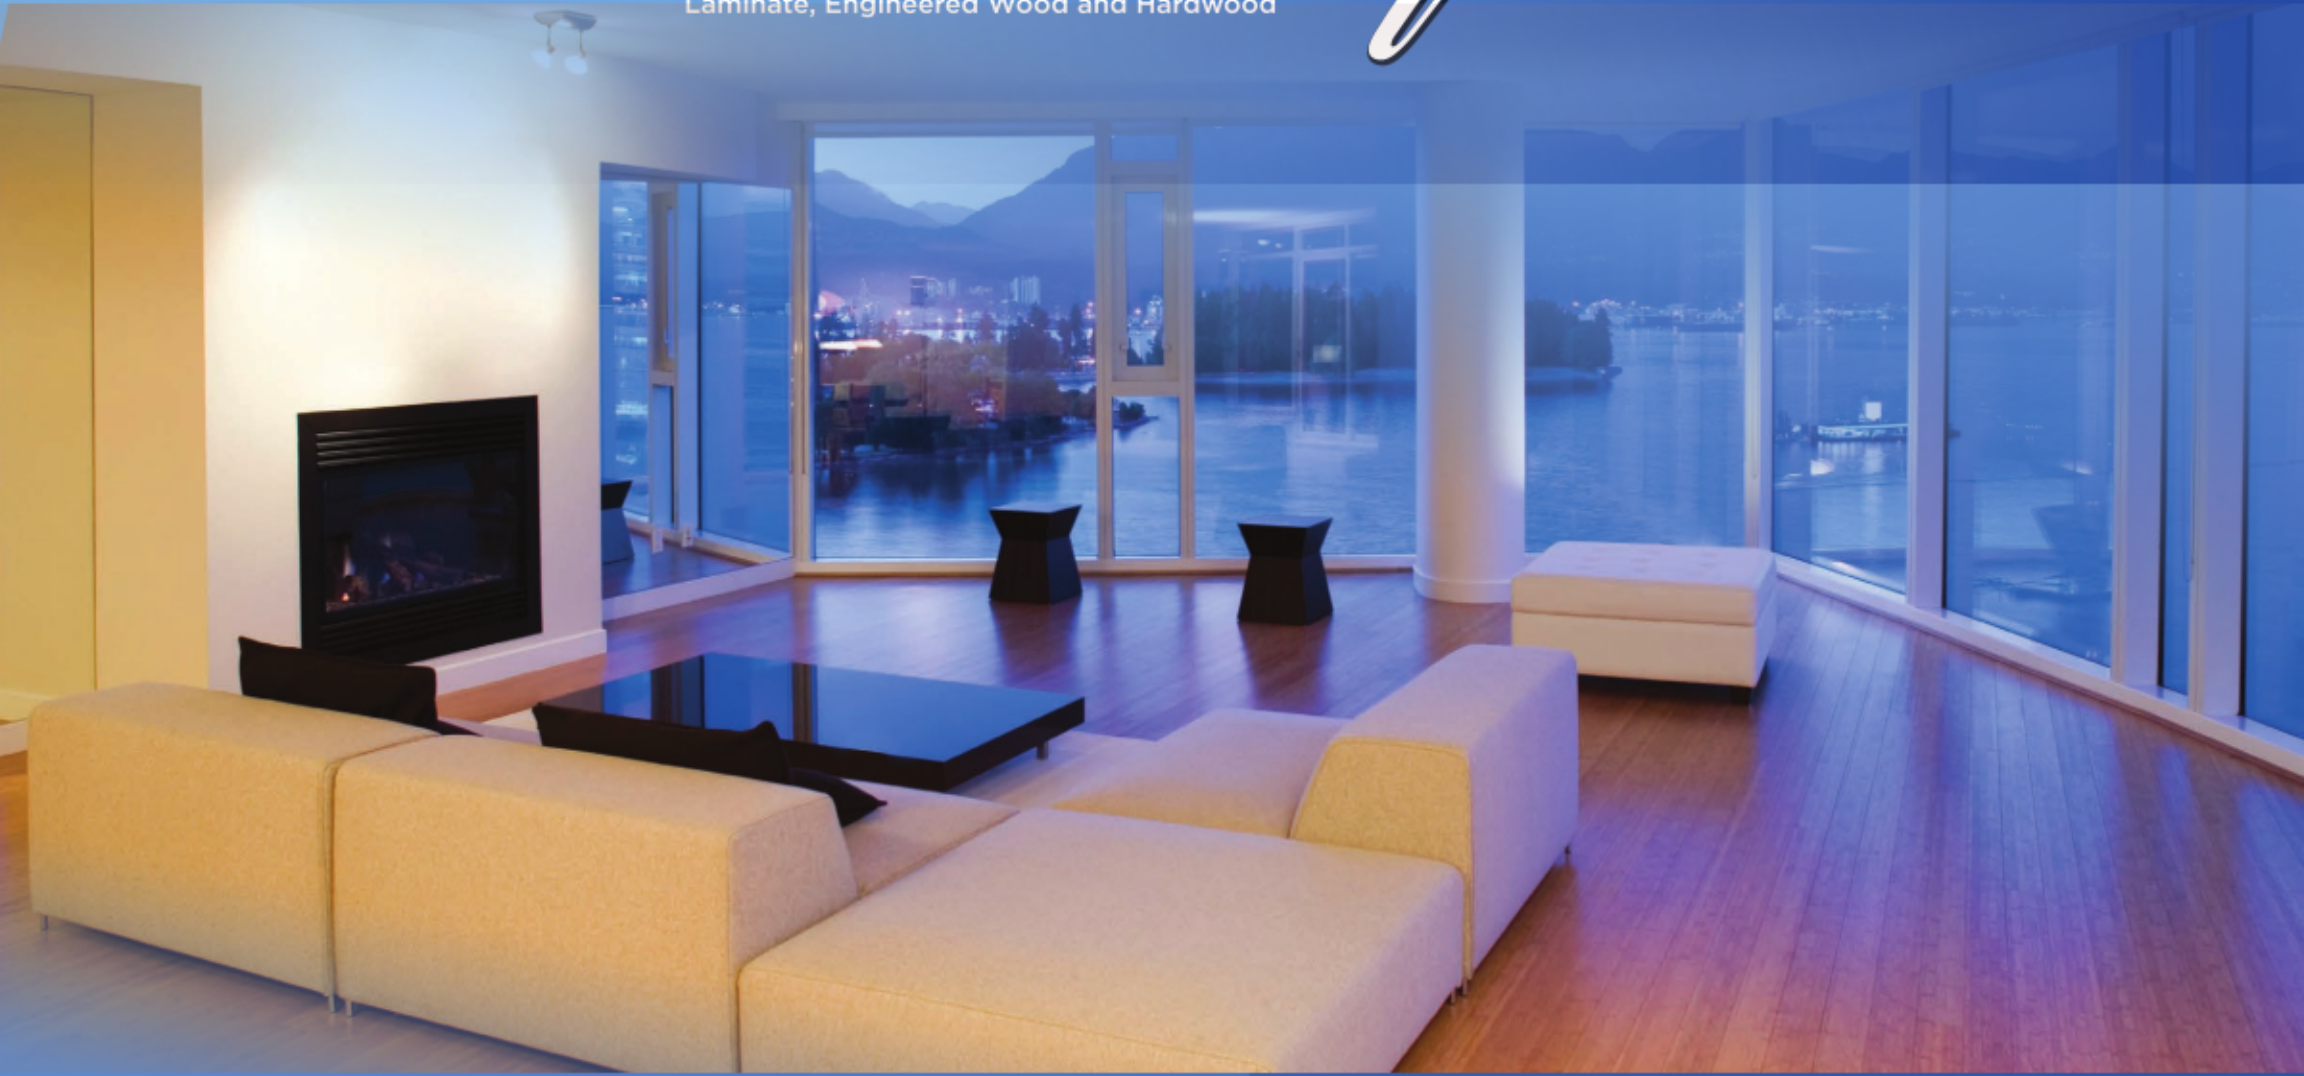

- Made from 100% virgin latex rubber with recycled tire crumb
- Advanced design with Superior Sound Reduction that exceeds building codes
- Sound ratings over 6" slab

Luxury Vinyl Tiles & Planks

Up to IIC 73 / STC 63 / Delta 27

Laminate & Wood Products

Up to IIC 67 / STC 63 / Delta 23

- Anti-Crush technology for excellent footfall performance and long life
- Excellent for radiant heat floors
- 100% Post-Consumer Recyclable
- Limited Lifetime Warranty

Approved For Use Under

- LVT/LVP
- SPC/WPC
- Laminate
- Engineered Wood
- Hardwood
- Direct attached laminate and vinyl flooring products

Application

- Residential
- Commercial

Approved Substrates

- Completely Cured Concrete
- Interior Plywood
- Cement Backer Units
- Properly Prepared OSB
- Gypcrete

1.8mm
THICK

36"
WIDE

31lbs
WEIGHT



GLP103

200 sq.ft.
ROLL

VINYLTRENDS
Vision and Value for your Environment

Winchester, VA, USA • Cambridge, ON, Canada



VTET10LBR200_0722

nwfa
National Wood Flooring Association
MEMBER MEMBRE

w f c a
WORLD FLOOR COVERING
ASSOCIATION

www.vinyltrends.com



Made in Canada with
North American
Raw Materials

Eternity™ 1

PREMIUM RUBBER UNDERLAYMENT

Advanced Underlayment for LVT/LVP, WPC/SPC,
Laminate, Engineered Wood and Hardwood

Floor Prep

Subfloor must be level, clean and dry with no protruding nails or staples. Concrete subfloor moisture emission rate may not exceed 3 lbs. / 1,000 sq. ft. / 24 hrs in accordance with ASTM F1869. If moisture emissions exceed this level an additional moisture barrier may be required.

ACCLIMATE UNDERLAYMENT FOR A MINIMUM OF 48 HRS. PRIOR TO INSTALLATION.
RELATIVE HUMIDITY MAY NOT EXCEED 65%.

Nail-Down Installation

1. Roll out underlayment fabric side up and parallel to the wall in the opposite direction the floor covering will be installed.
2. Trim the underlayment to fit the sub-floor leaving a ¼" gap at each wall.
3. Roll out the next section of underlayment in the same manner making sure the seams are butted together but not overlapping and close the seams using a 2" wide aggressive adhesive tape.
4. Install the floor covering according to the manufacturer's guidelines.

BE SURE TO ADJUST THE AIR PRESSURE WHEN USING A NAIL GUN SO THAT THE NAIL/STAPLE IS FIRMLY SET BUT NOT FULLY COMPRESSING THE UNDERLAYMENT.

Double Glue Installation

Gluing underlayment to sub-floor

Premium flooring adhesives should be used. Proper adhesives can be obtained from a wide range of manufacturers. Prior to installation, contact the adhesive manufacturer to verify compatibility.

Be sure to follow the adhesive manufacturer's recommendation for trowel size, all site guidelines and installation instructions.

1. Roll out underlayment fabric side up and parallel to the wall in the opposite direction the floor covering will be installed.
2. Trim the underlayment to fit the sub-floor leaving a ¼" gap at each wall.
3. Roll out the next section of underlayment in the same manner making sure the seams are butted together but not overlapping.
4. Begin to apply adhesive to the sub-floor by pulling back the cut to size underlayment. Be sure to use the trowel size recommended by the adhesive manufacture. Allow adhesive to become tacky before setting the underlayment (DO NOT WET SET UNDERLAYMENT) and be careful not to trap bubbles.
5. Roll completed underlayment installation with a 35 lb. roller in both directions to ensure an adequate bond.
6. Repeat steps 3 - 5 for the entire installation.
7. Allow recommended adhesive cure time before walking, or placing anything, onto the installed underlayment.
8. Install the floor covering according to the manufacturer's installation instructions. Note: When installing vinyl flooring tiles or planks be sure to allow adhesive to become tacky to the touch before installation of flooring over underlayment. DO NOT WET SET FLOORING PRODUCTS OVER UNDERLAYMENT.

Floating Installation

1. Roll out underlayment fabric side up and parallel to the wall, in the opposite direction the floor covering will be installed.
2. Trim the underlayment to fit the sub-floor, leaving a ¼" gap at each wall.
3. Roll out the next section of underlayment in the same manner making sure the seams are butted together but not overlapping, and close the seams using a 2" wide aggressive adhesive tape.
4. Install the floor covering according to the manufacturer's guidelines.

DISCLAIMER:

DO NOT WET SET UNDERLAYMENT OR FLOORING MATERIALS INTO ADHESIVE. BE SURE TO ALLOW THE ADHESIVE TO PROPERLY FLASH AND BECOME TACKY TO THE TOUCH BEFORE APPLICATION OR FAILURES COULD RESULT SUCH AS SEPERATION OF THE PLANKS OR TILES, CUPPING, PEAKING OR OTHERWISE.

ONLY APPROVED AND TESTED ADHESIVES SHOULD BE USED.

Approved Adhesives

For luxury vinyl tiles and planks

- **BOSTIK**
BEST (for Engineered Wood)
EFA (for Engineered Wood)
GREENFORCE (for Engineered Wood)
GREEN FUSION (for LVT)
- **FRANKLIN**
TITEBOND 670
TITEBOND 771-STEP
TITEBOND 811
- **KRAUS**
KPA501
- **MAPEI**
ECO360
ECO373
G90
G21
- **POWERHOLD**
PH6000
PH6200
PH6350
PH6250PSA
- **PROFLEX®**
Prostick 76 (PS-76)
Prostick 77 (PS-77)
ProBond
PWA 185
PWA 400
PWA 500
PWA 600
PWA 700
- **ROBERTS**
6300
- **STAUF**
D-737
D764
- **TEC**
744 SOLID VINYL PLANK AND TILE ADHESIVE
752 PREMIUM TRANSITIONAL VINYL ADHESIVE

Single Glue Installation

Floating underlayment over subfloor

1. Roll out underlayment fabric side up and parallel to the wall, in the opposite direction the floor covering will be installed.
2. Trim the underlayment to fit the subfloor, leaving a ¼" gap at each wall.
3. Roll out the next section of underlayment in the same manner making sure the seams are butted together but not overlapping, and close the seams using a 2" wide aggressive adhesive tape .
4. Install the floor covering according to the manufacturer's installation instructions. Note: When installing vinyl flooring tiles or planks be sure to allow adhesive to become tacky to the touch before installation of flooring over underlayment. DO NOT WET SET FLOORING PRODUCTS OVER UNDERLAYMENT
5. NOTE: If installing over a concrete subfloor, make sure moisture vapour emissions are within the allowable limit or install an additional moisture barrier.

DISCLAIMERS: IN SINGLE GLUE INSTALLATIONS (FLOATING THE UNDERLAYMENT AND GLUING FLOORING MATERIAL ON TOP) PLEASE NOTE THAT THE UNDERLAYMENT IS NOT DESIGNED TO COUNTERACT FLOORING MATERIAL MOVEMENT OR CHANGES IN WIDTH OR LENGTH DUE TO TEMPERATURE FLUCTUATIONS OUTSIDE THE SPCIFIED ACCEPTABLE RANGE OF THE FLOORING MANUFACURERS. ANY CLAIMS RESULTING FROM CUPPING, PEAKING, WARPING OR OTHER DEFORMATION OF FLOORING PLANKS OR TILES WILL NOT BE APPROVED OR ACCEPTED.

DO NOT WET SET UNDERLAYMENT OR FLOORING MATERIALS INTO ADHESIVE. BE SURE TO ALLOW THE ADHESIVE TO PROPERLY FLASH AND BECOME TACKY TO THE TOUCH BEFORE APPLICATION OR FAILURES COULD RESULT SUCH AS SEPARATION OF THE PLANKS OR TILES, CUPPING, PEAKING OR OTHERWISE.

ONLY APPROVED AND TESTED ADHESIVES SHOULD BE USED.